FLUORESCENT FLUSH MOUNT FIXTURE ASSEMBLY & INSTALLATION INSTRUCTIONS

Please read carefully and save this instruction sheet, as you may need it at a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

1. Turn off power at the circuit breaker.
2. Detach the FRAME(19) and the ACRYLIC LENS(17) from the FIXTURE BODY(10) by removing the THUMB SCREWS(18). Detach the BALLAST COVER(16) from the FIXTURE BODY(10) by removing the BALLAST COVER SCREWS(21).
3. Place the FIXTURE BODY(10) onto the desired location, centering it over the OUTLET BOX(1). Mark the location of all the KEYHOLE SLOTS(20).
4. Remove the FIXTURE BODY(10) from the ceiling. Drill appropriately sized holes at the marked keyhole locations. Insert the CEILING ANCHORS(9) into the holes. Thread the MOUNTING SCREWS(12) halfway into the CEILING ANCHORS(9).
5. Pull all the supply wires from the OUTLET BOX(1) and feed them through the center hole of the COVER PLATE(11). Secure the COVER PLATE(11) to the OUTLET BOX(1) using the COVER PLATE SCREWS(15).
6. Feed the supply wires through the center hole of the FIXTURE BODY(10). Place the FIXTURE BODY(10) onto the desired location, making sure that the halfway threaded MOUNTING SCREWS(12) feed through the large openings of the KEYHOLE SLOTS(20). Slide the FIXTURE BODY(10) so that the MOUNTING SCREWS(12) slide into the narrow slots of the KEYHOLE SLOTS(20). Tighten the MOUNTING SCREWS(12) down to secure the FIXTURE BODY(10) in place.
7. Connect the BLACK FIXTURE WIRE(5) to the BLACK SUPPLY WIRE(6) (+) and the WHITE FIXTURE WIRE(8) to the WHITE SUPPLY WIRE(7) (-), using the provided WIRE NUTS(3). Similarly, connect the FIXTURE GROUND WIRE(4) to the SUPPLY GROUND WIRE(2).
8. Carefully tuck all wire connections into the FIXTURE BODY(10). Replace the BALLAST COVER(16) and secure it in place using the BALLAST COVER SCREWS(21).
9. Insert FLUORESCENT BULBS(14) into the provided LAMP SOCKETS(13). Turn each FLUORESCENT BULB ¼ turn, until there is a click. Be sure to use the lamp type and wattage specified on the lamp replacement label.
10. Re-attach the FRAME(19) and the ACRYLIC LENS(17) to the FIXTURE BODY(10). (NOTE: For ease of installation, a SUPPORT PIN(22) is provided at one end of the FRAME(19). During this step, angle this end of the FRAME(19) toward the end of the FIXTURE BODY(10) with the SUPPORT PIN HOLE(23). Feed the SUPORT PIN(22) through the HOLE(23). Lift the the other end of the FRAME(19) toward the FIXTURE BODY(10) and secure this end of the FRAME(19) using the provided THUMB SCREWS(18). Secure the other end using THUMB SCREWS(18).)
11. Restore power at the circuit breaker.

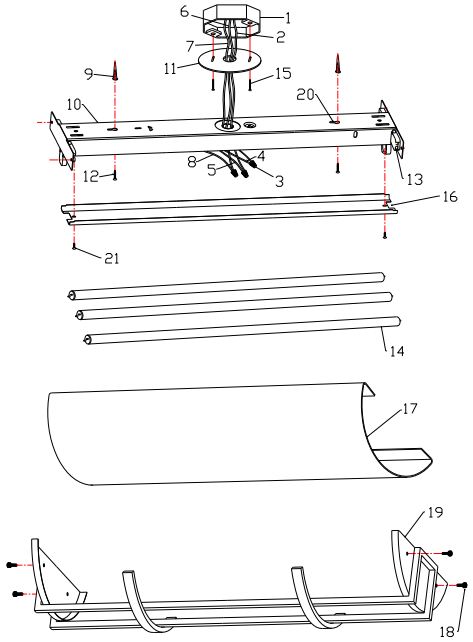

1. OUTLET BOX
2. SUPPLY GROUND WIRE
3. WIRE NUT
4. FIXTURE GROUND WIRE
5. BLACK FIXTURE WIRE
6. BLACK SUPPLY WIRE
7. WHITE SUPPLY WIRE
8. WHITE FIXTURE WIRE
9. CEILING ANCHOR
10. FIXTURE BODY
11. COVER PLATE
12. MOUNTING SCREW
13. LAMP SOCKET
14. FLUORESCENT BULB (not provided)
15. COVER PLATE SCREW
16. BALLAST COVER
17. ACRYLIC LENS
18. THUMB SCREW
19. FRAME
20. KEYHOLE SLOT
21. BALLAST COVER SCREW
22. SUPPORT PIN (not shown)
23. SUPPORT PIN HOLE (not shown)